

User operating card - type 1

Template ,User Operating card CR24-...‘

Aims as template for integration into technical documentations such as:

- operating instructions for office building
- guest guide hotel
- ...

System type 1)

- Air conditioning - VAV
- Combined systems
 - VAV with re-heater
 - VAV with re-cooler
 - VAV with chilled ceiling
- Change/Over systems with CR24-B1

Short reference room temperature controller



Status indication
• MAX
• ECO
• AUTO

Mode selection

Room temperature
setpoint adjustment

Instruction – Mode selection

MAX - the room air gets flushed for 15 minutes [Timer^{*)}]
max. heating- or. cooling until setpoint reached

ECO - optimum energy mode
the room temperature setpoint is:
- reduced by 2 Kelvin for the heating condition
- increased by 3 Kelvin for the cooling condition
e.g. for night condition or absence

AUTO - optimum comfort mode

^{*)} can be interrupted by switching to AUTO mode

Room temperature - setpoint adjustment



Setpoint can be adjusted ± 3 Kelvin.

The adjustment is valid for all three modes (AUTO / ECO / MAX).

How to use the template:

Use the copy option (PDF Adobe Reader feature ,Graphic selection‘) and the paste option to insert into a text document (e.g. doc)

User operating card - type 2

Template ,User Operating card CR24-...‘

Aims as template for integration into technical documentations such as:

- operating instructions for office building
- guest guide hotel
- ...

System type 2)

- Water applications
- Chilled ceiling applications
- Change/Over systems with CR24-B3

Short reference room temperature controller



Status indication
• MAX
• ECO
• AUTO

Mode selection

Room temperature
setpoint adjustment

Instruction – Mode selection

MAX - max heat or cool capacity until

- target temperature reached or

- 15 minute timer expires *)

ECO - optimum energy mode

the room temperature setpoint is:

- reduced by 2 Kelvin for the heating condition

- increased by 3 Kelvin for the cooling condition

e.g. for night condition or absence

AUTO - optimum comfort mode

*) can be interrupted by switching to mode AUTO

Room temperature - setpoint adjustment



Setpoint can be adjusted \pm 3 Kelvin

The adjustment is valid for all three modes (AUTO / ECO / MAX).

How to use the template:



Use the copy option (PDF Adobe Reader feature ,Graphic selection‘) and the paste option to insert into a text document (e.g. doc)