


## General

This additional document describes the settings for the 6-way EPIV by using the ZTH EU service tool. The basic functions and more applications are described in the official ZTH EU documentation.

## Functions for 6-way EPIV

**Menu tree** The following menu tree shows the possible settings and values of the 6-way EPIV

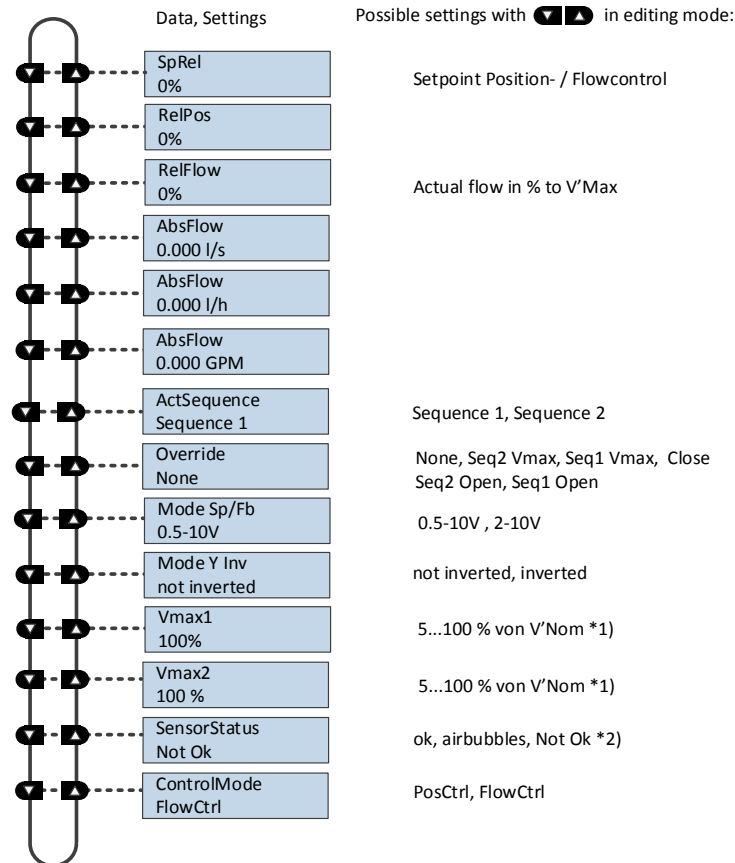

\*1) Compliance with the maximum absolute values is in the responsibility of the operator. The product-specific limits must be adhered to (see data sheet)

\*2) ok : Flow sensor is working properly  
 airbubbles : Flow sensor is working properly , Airbubbles in the system  
 Not Ok: Sensor error