

Duct/Immersion Temperature Sensor

Active sensor (4...20 mA) for measuring temperature in duct applications. In connection with a stainless steel or brass thermowell also applicable for pipe applications. NEMA 4X / IP65 rated enclosure.





Type Overview

Туре	Output signal active temperature	Probe length	Probe diameter
22DT-14H	420 mA	50 mm	6 mm
22DT-14L	420 mA	100 mm	6 mm
22DT-14N	420 mA	150 mm	6 mm
22DT-14P	420 mA	200 mm	6 mm
22DT-14R	420 mA	300 mm	6 mm
22DT-14T	420 mA	450 mm	6 mm

Technical Data				
Electrical data	Power Supply DC	1524 V, ±10%, 0.5 W		
	Electrical connection	Removable spring loaded terminal block max. 2.5 mm ²		
	Cable entry	cable gland PG11 Ø610 mm, with strain relief Ø68 mm		
Functional data	Multirange	YES		
	Output signal active note	Current outout: max. 500 Ω load		
	Media	Air Water		
Measuring data	Measured values	Temperature		
	Measuring range temperature	range selectable Setting range [°C] range [°F] Factory setting		
		S0		
		S6 -2080 °C 4090 °F S7 0160 °C 0150 °F		
	Accuracy temperature	±1% of measuring range @ 21 °C		
Materials	Cable gland	PA6, black		
	Housing	Cover: Lexan, Belimo orange NCS S0580- Y6OR Bottom: Lexan, Belimo orange NCS S0580- Y6OR Seal: 0467 NBR70, black		



Sensor Datasheet 22DT-14..

Safety data

Ambient humidity	85% r.h., non-condensing		
Ambient Temperature	-3550 °C [-30122 °F]		
Medium temperature	-50160 °C [-60320 °F]		
Housing surface temperature	Max. 70 °C [160 °F]		
Protection class IEC/EN	III Protective extra-low voltage (PELV)		
Protection class UL	UL Class 2 Supply		
EU Conformity	CE Marking		
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-9		
Certification UL	pending		
Degree of protection IEC/EN	IP65		
Degree of protection NEMA/UL	NEMA 4X		
Quality Standard	ISO 9001		

Safety notes



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- · Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Remarks

General remarks concerning sensors

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of the transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage (±0.2 V). When switching the supply voltage on/off, onsite power surges must be avoided.

Build-up of Self-Heating by Electrical Dissipative Power


Temperature sensors with electronic components always have a dissipative power which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power should be taken into account when measuring temperature. In case of a fixed operating voltage (±0.2 V) this is normally done by adding or reducing a constant offset value. As Belimo transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0...10 V / 4...20 mA have a standard setting at an operating voltage of DC 24 V. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.



Accessories			
	Optional accessories	Description	Туре
		Mounting flange 6 mm, Plastic (adjustable), up to max. 120 °C Mounting flange 6 mm, Brass, up to max. 260 °C	A-22D-A03 A-22D-A05
Mandatory accessories		Description	Туре
		Thermowell pocket Stainless steel, 50 mm, G1/2", SW27 Thermowell pocket Stainless steel, 100 mm, G1/2", SW27 Thermowell pocket Stainless steel, 150 mm, G1/2", SW27 Thermowell pocket Stainless steel, 200 mm, G1/2", SW27 Thermowell pocket Stainless steel, 300 mm, G1/2", SW27 Thermowell pocket Stainless steel, 450 mm, G1/2", SW27 Thermowell pocket Brass, 50 mm, G1/2", SW27 Thermowell pocket Brass, 100 mm, G1/2", SW22 Thermowell pocket Brass, 150 mm, G1/2", SW22 Thermowell pocket Brass, 200 mm, G1/2", SW22 Thermowell pocket Brass, 300 mm, G1/2", SW22 Thermowell pocket Brass, 300 mm, G1/2", SW22 Thermowell pocket Brass, 450 mm, G1/2", SW22	A-22P-A06 A-22P-A08 A-22P-A10 A-22P-A12 A-22P-A14 A-22P-A16 A-22P-A18 A-22P-A20 A-22P-A22 A-22P-A22 A-22P-A24 A-22P-A26 A-22P-A28
	Scope of delivery	For Immersion Application a Thermowell pocket A-22P-A is recommounting Clip Screws Adhesive foil	nmended.
		AUTIESIVE IUII	



Wiring diagram

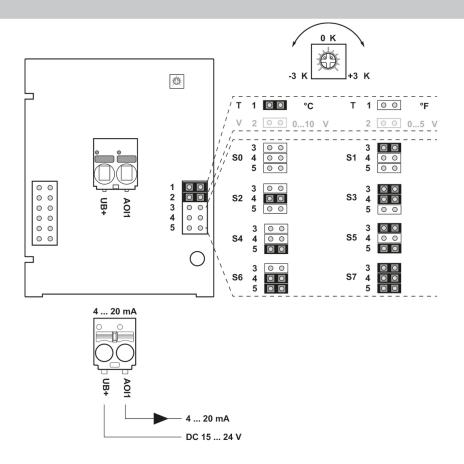

The adjustment of the measuring ranges is made by changing the bonding jumpers. The output value in the new measuring range is available after 2 seconds.

Setting	range [°C]	range [°F]	Factory setting
S0	-5050 °C	-30130 °F	· ·
S1	-10120 °C	0250 °F	
S2	050 °C	40140 °F	
S3	0250 °C	30480 °F	
S4	-1535 °C	0100 °F	
S5	0100 °C	40240 °F	
S6	-2080 °C	4090 °F	
S7	0160 °C	0150 °F	~



Dimensions

